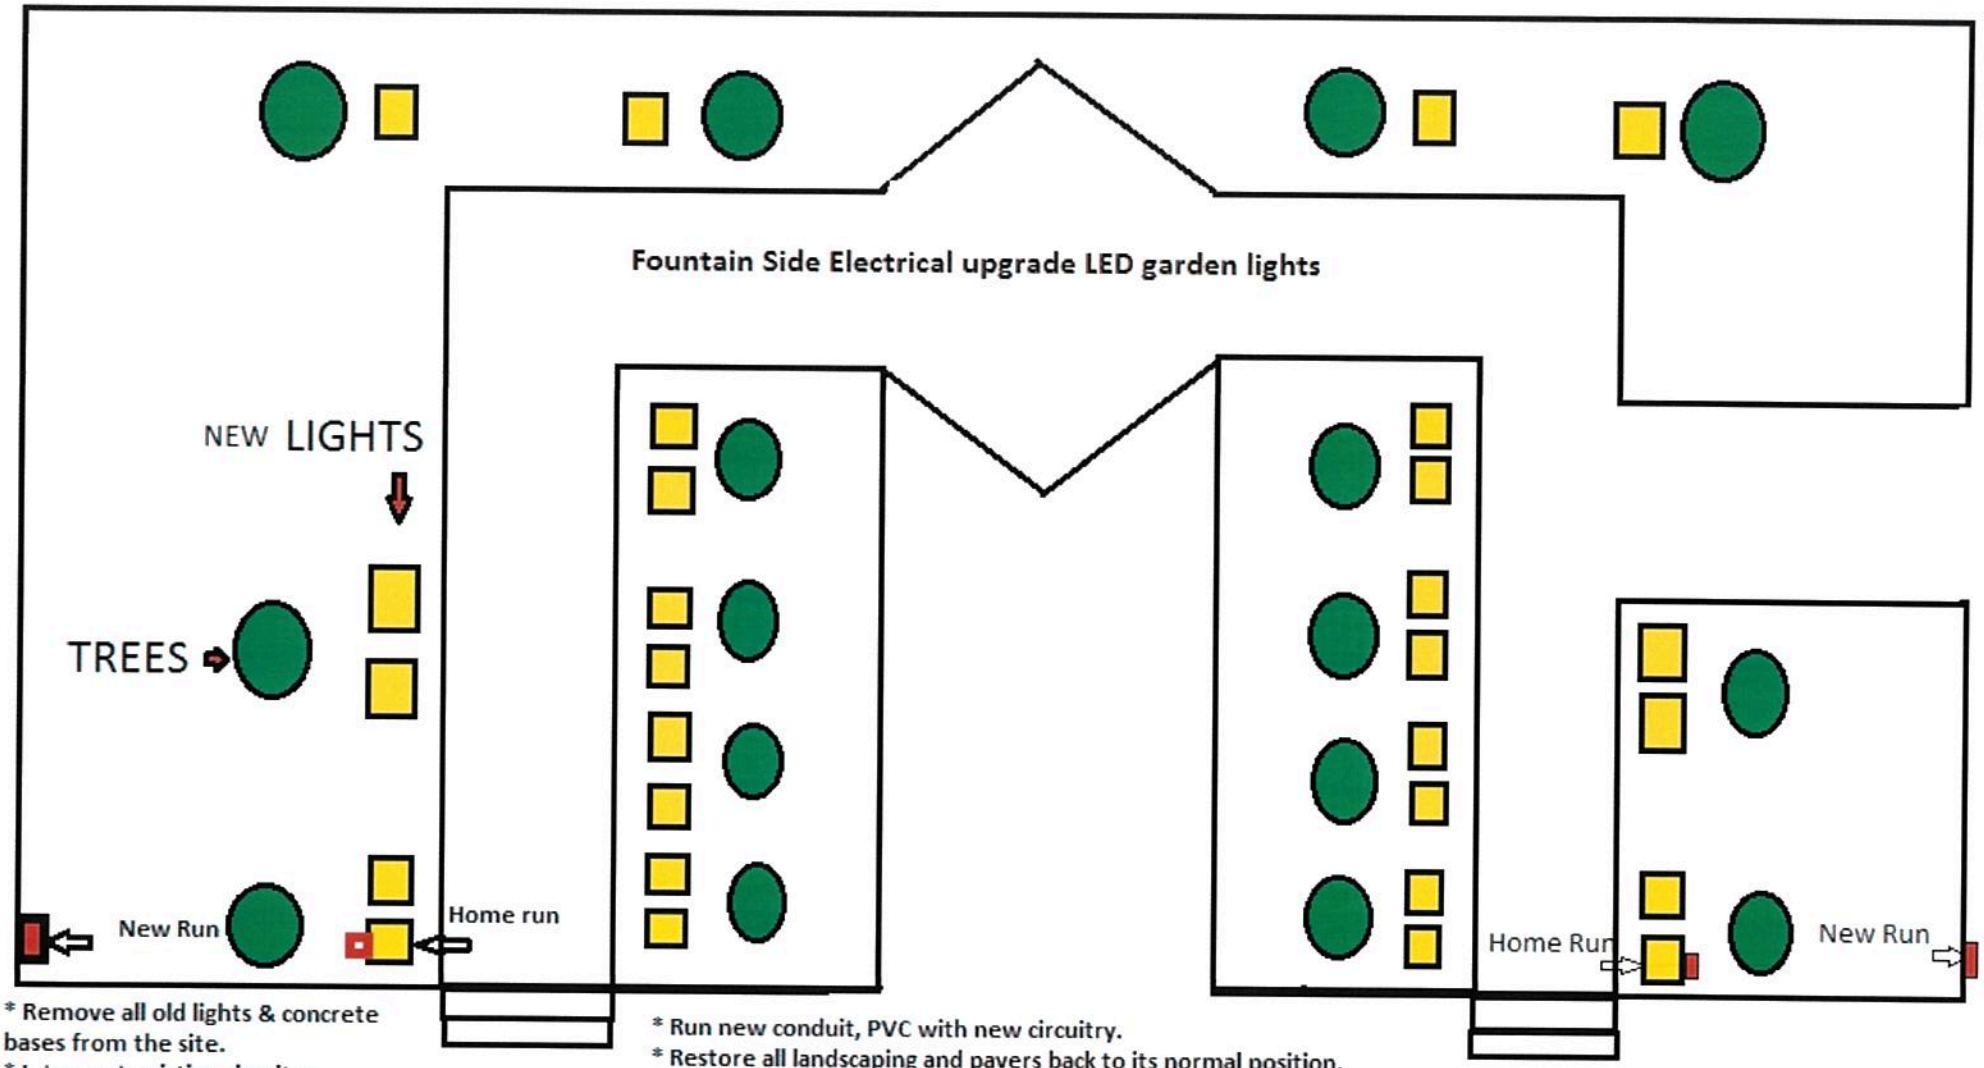

* Remove all old lights & concrete bases from the site.
* Intercept existing circuitry

* Run new conduit, PVC with new circuitry.
* Restore all landscaping and pavers back to its normal position.