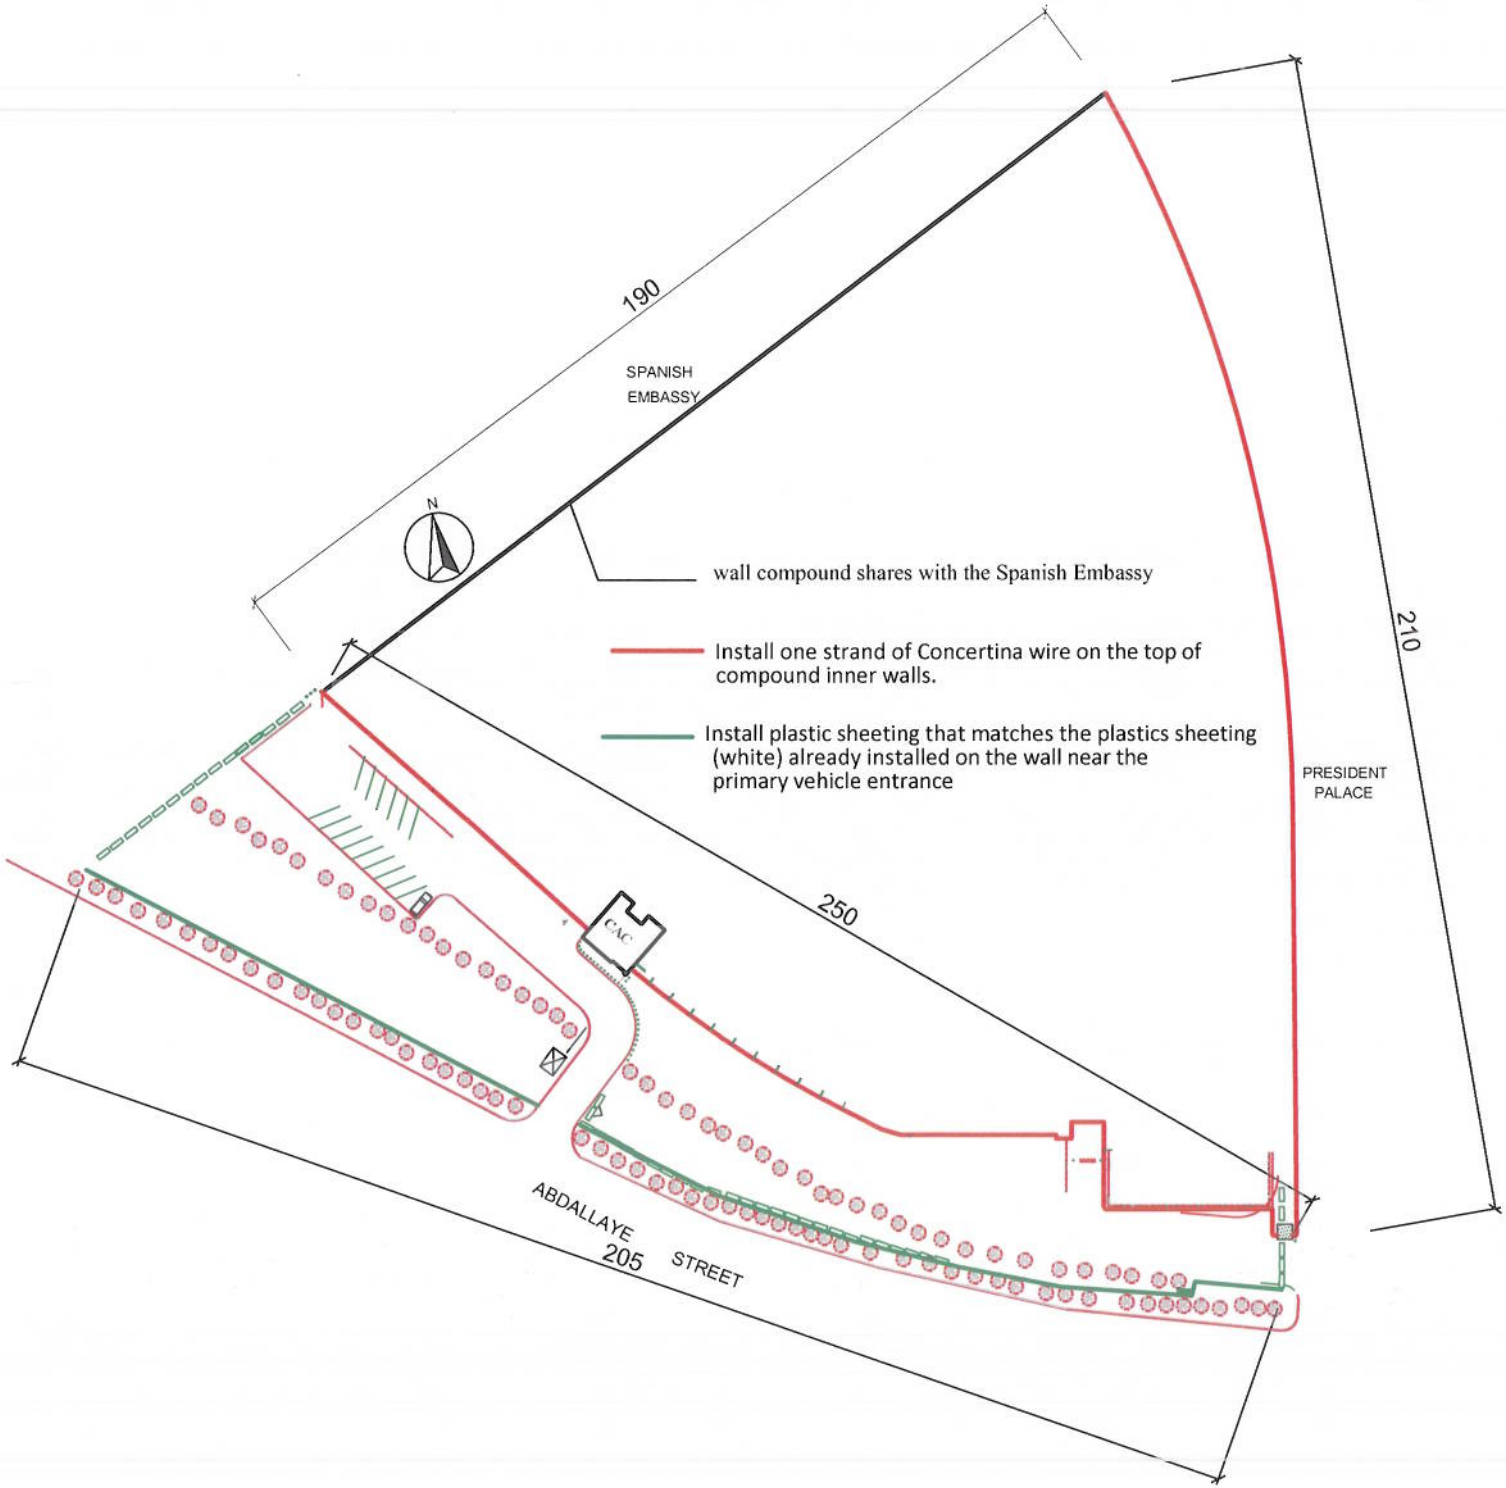
190
SPANISH
EMBASSY
N
wall compound shares with the Spanish Embassy
Install one strand of Concertina wire on the top of compound inner walls.
Install plastic sheeting that matches the plastics sheeting (white) already installed on the wall near the primary vehicle entrance
210
PRESIDENT
PALACE
250
CAC
ABDALLAYE
205
STREET